



### HOME

- Press the **HOME** button to return to the Fire TV home menu.

### MENU

- To access the menu, press the **MENU** button.

### SELECT/NAVIGATION

- Press **SELECT** to access the Guide or other menu options including Shows, Movies, DVR, Settings, and Search.
- Use **SELECT** to navigate through the Menu or Guide.
  - Press up or down to move through the Guide to see programs currently playing. Hold the up or down key to scroll quickly.
  - Press right to move forward in the Guide to view upcoming programs.
  - Press left to go back or access the Replay TV menu.
- When selecting a show in the Guide to watch, press the **SELECT** button to begin watching. Your viewing options will appear. Press **SELECT** again to play, record, or learn more.
- You can channel surf while watching a program. Once in the program, press up or down to move one channel in the lineup.

### BACK

- Use the **BACK** button to exit out of the program or menu.

### PLAY/PAUSE

- Utilize the **PLAY/PAUSE** button to pause a program.

### REWIND and FAST FORWARD

- Use the **REWIND** and **FAST FORWARD** buttons to rewind a live program, or to fast forward or rewind a recorded program. Press **PLAY** to resume playing. To access the DVR, go to the **MENU**, then select the 4<sup>th</sup> icon. You can view your recorded and scheduled programs.